

Ballast Replacement Instructions

A56

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician.

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*


Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

The ballast in this fixture is replaceable without cutting wires.

To Replace Ballast

Caution: Be sure power is off at the main breaker box prior to replacing ballast.

1. Remove ballast from fixture by inserting a flat bladed screwdriver behind tabs, located on the side of the ballast adjacent to the mounting screws, and prying outward.
2. Attach new ballast to fixture by aligning tabs snapping it into place For replacement ballast information, refer to the phone number printed on the ballast case.

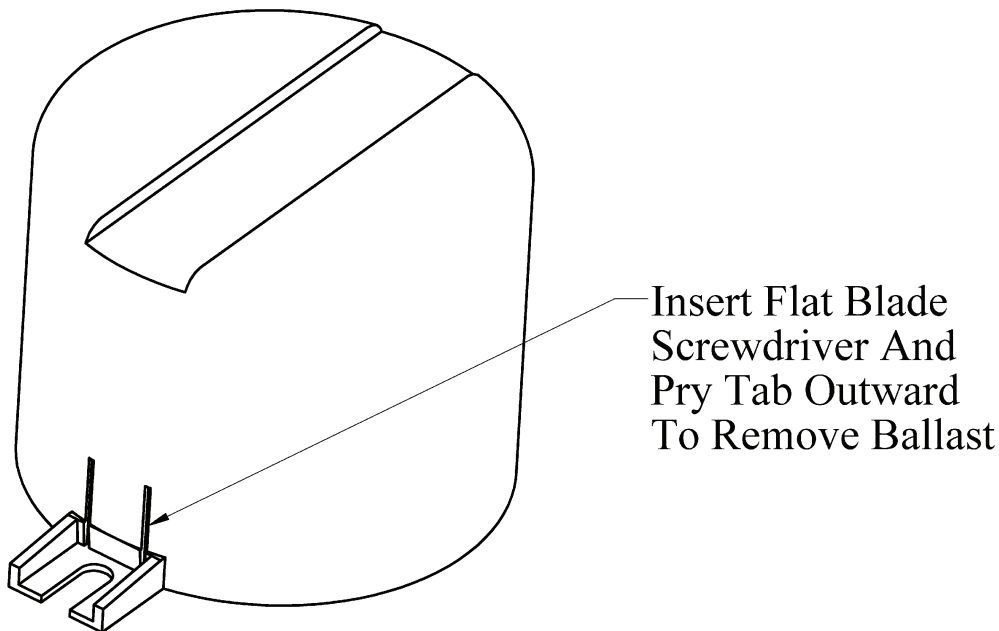

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.