


Assembly & Installation Instructions

Loves Me Pendant 139872

A537

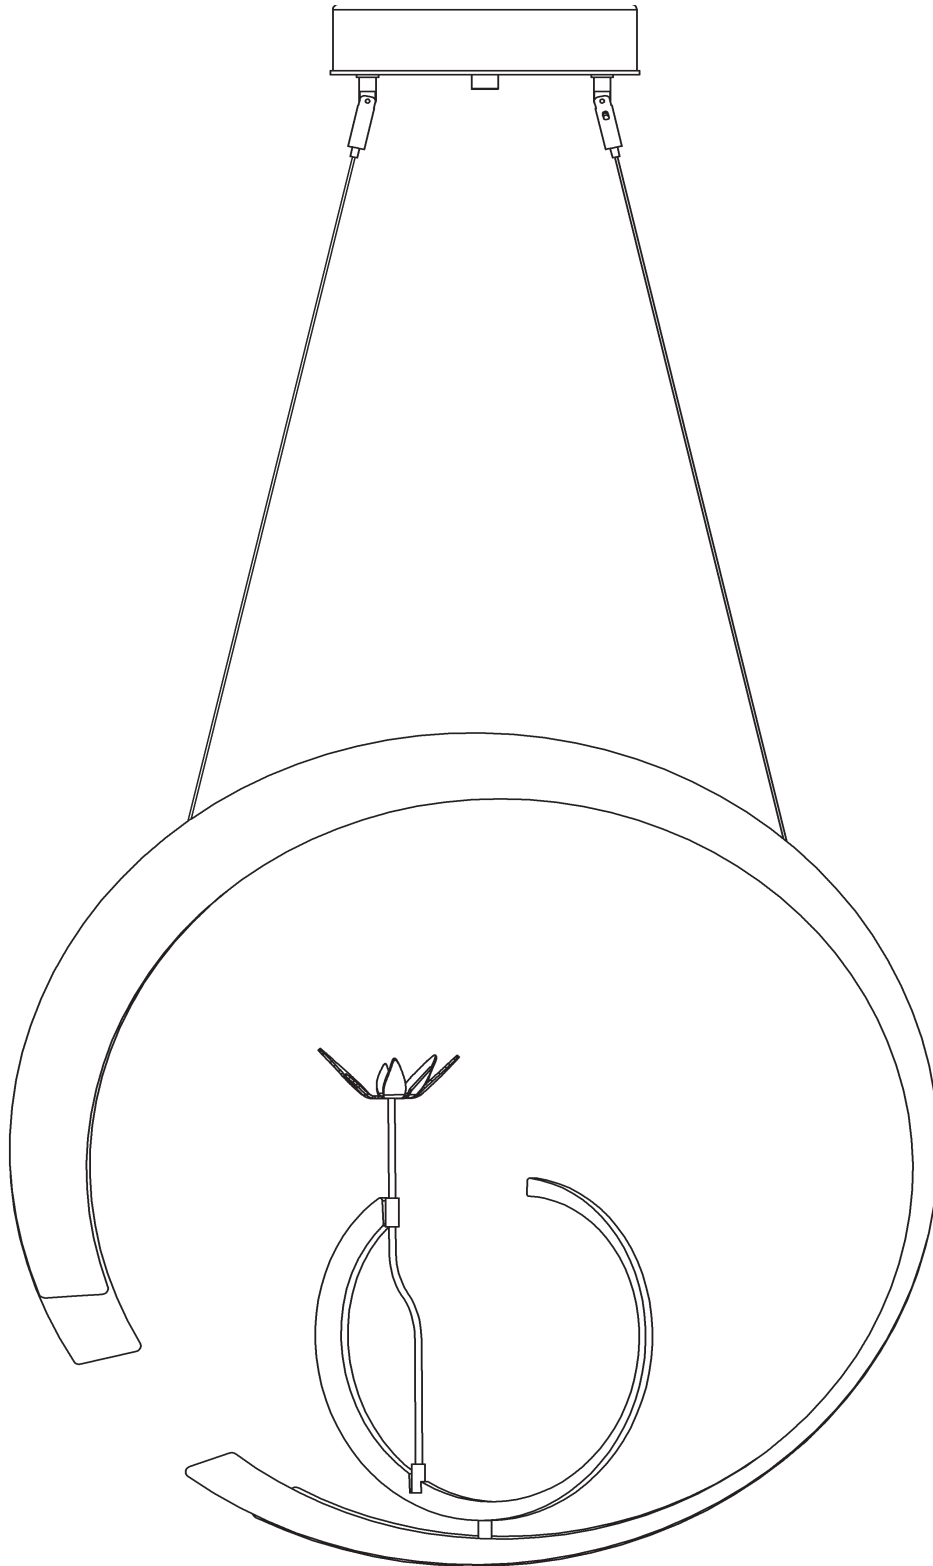

vermont
modern
BY HUBBARDTON FORGE

Castleton, Vermont USA | VERMONTMODERN.COM

40291

1 OF 4

Component Parts

- A Cap**
- B Canopy Cover Plate**
- C Grippers (2)**
- D Canopy**
- E Cupped Washer**
- F Ground Screw**
- G Support/Supply Cables (2)**
- H Fixture**
- I Lock Nut**
- J Threaded Nipple**
- K Flower Accent**
- J Alignment Post**



Assembly & Installation Instructions

A537

Loves Me Pendant 139872

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products.

To Install Canopy (Figure 1)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture from carton.
2. Unscrew cap (A) and remove canopy cover plate (B) with grippers (C) attached. Set canopy cover plate aside for use later. Tighten lock nut (I) to inside of canopy (D). This will lock the height of the threaded nipple (J).
3. Thread the wires from the electrical box through the hole in canopy (D) while moving the canopy into position. Using two machine screws (not provided) attach the canopy to to the electrical box.


Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

4. Attach a pigtail ground lead to canopy (D) using cupped washer (E) and ground screw (F) found in the kit bag.
5. Holding canopy cover plate (B) close to canopy (D) and using suitable wire connectors (not provided) connect supply wires to driver wires (black to black and white to white). Connect all ground wires (bare copper or green to bare copper or green) together.

Caution: Be sure wire connectors are twisted on securely, and no bare wire is exposed.

6. Push canopy cover plate (B) against canopy (D) and secure with cap (A) being sure not to pinch any wires between the cover and canopy.

(Figure 1)

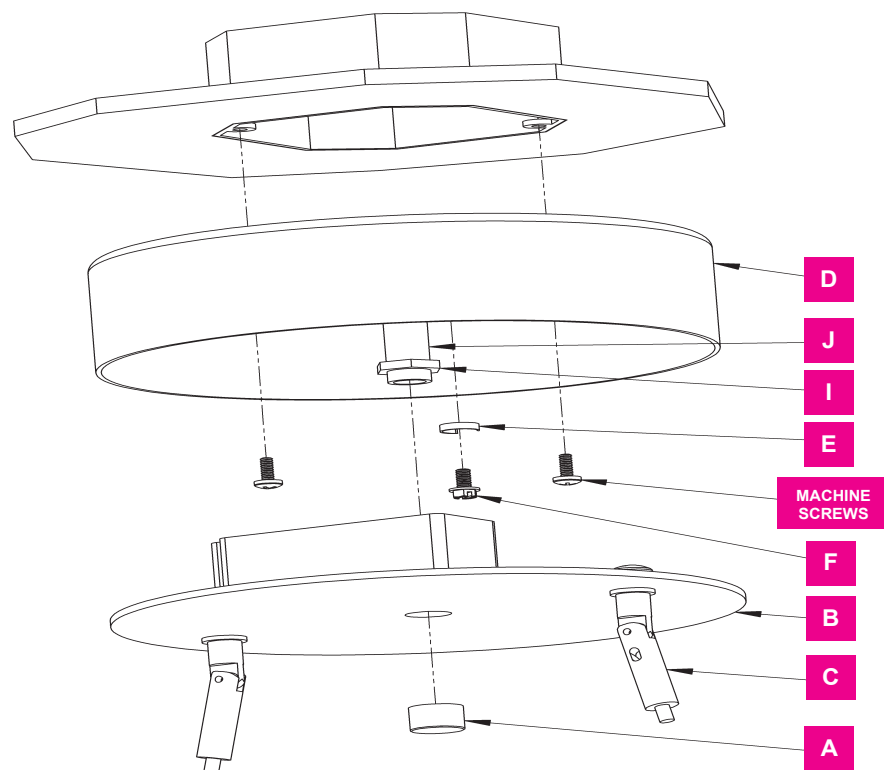

Yeah, you got this!



vermont
modern
BY HUBBARDTON FORGE

Castleton, Vermont USA | VERMONTMODERN.COM

40291

3 OF 4

To Install Fixture (Figure 2)

1. Uncoil supply/support cables (G) coming from fixture (H).
2. Align the (+) label on the fixture (H) with the (+) label on the gripper (C). Push the supply/support cable (G) through the gripper until the cable sticks through the slot in the side of the gripper.
3. Push second supply/support cable (G) into the second gripper (C) and adjust both cables until desired height of the fixture (H) is reached.

Note: If the fixture needs to be lowered, push up on the plunger of gripper to release cable.


4. Once desired height of fixture (H) is reached, cut the excess supply/support cables (G) as close to the slot in grippers (C) as possible.

Caution: Once excess supply/support cable is cut, the fixture cannot be lowered.

5. Lower the flower accent (K) onto the alignment post (J).

Note: The flower accent (K) will be able to rotate freely on the alignment post (J). The metal flower can also be spun inside the flower accent to be set in the desired orientation.

6. Restore electricity at main breaker.

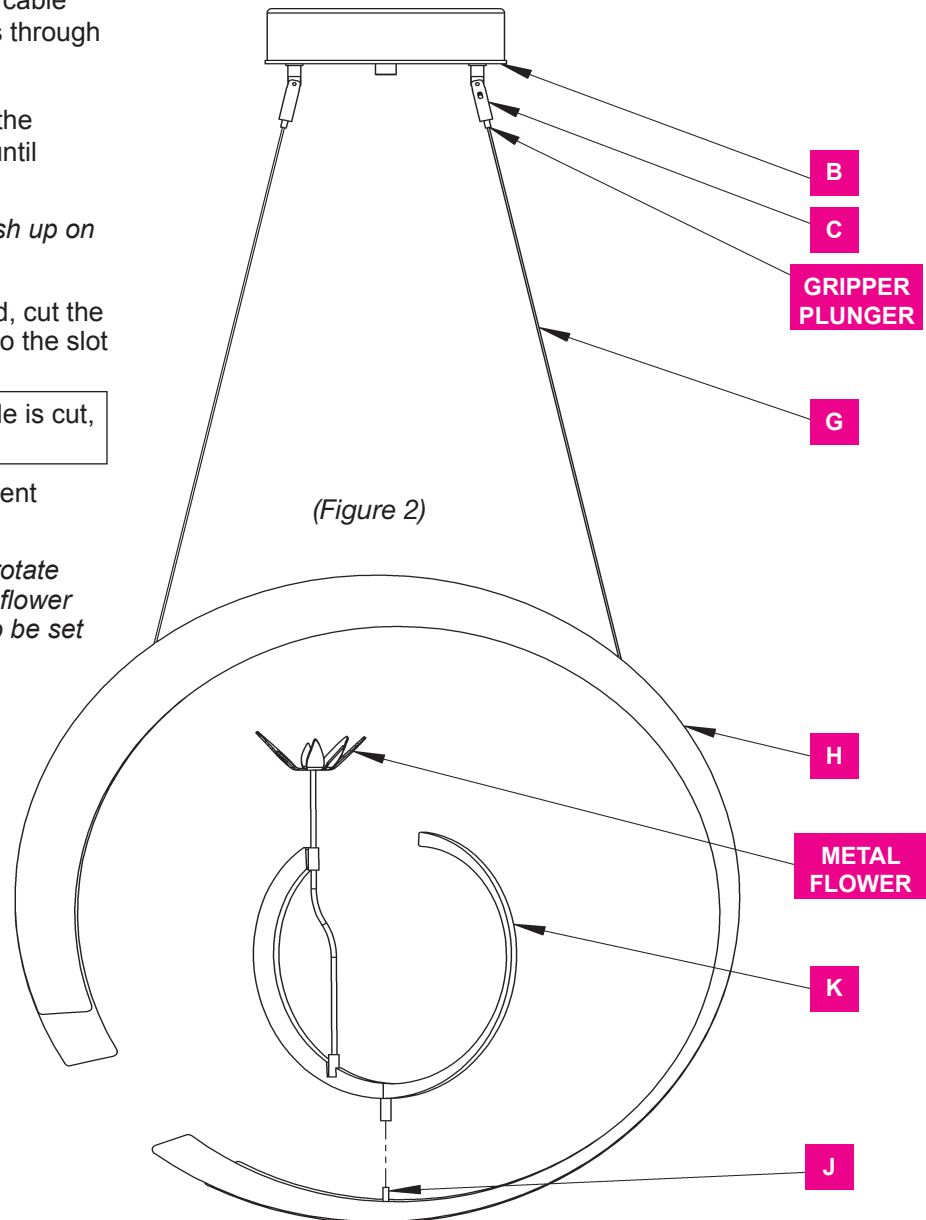

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Vermont Modern / Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**